




# Lenovo IdeaPad U450 Keyboard Replacement

Lenovo IdeaPad U450 keyboard replacement.

Written By: Rachel L Rodrigues

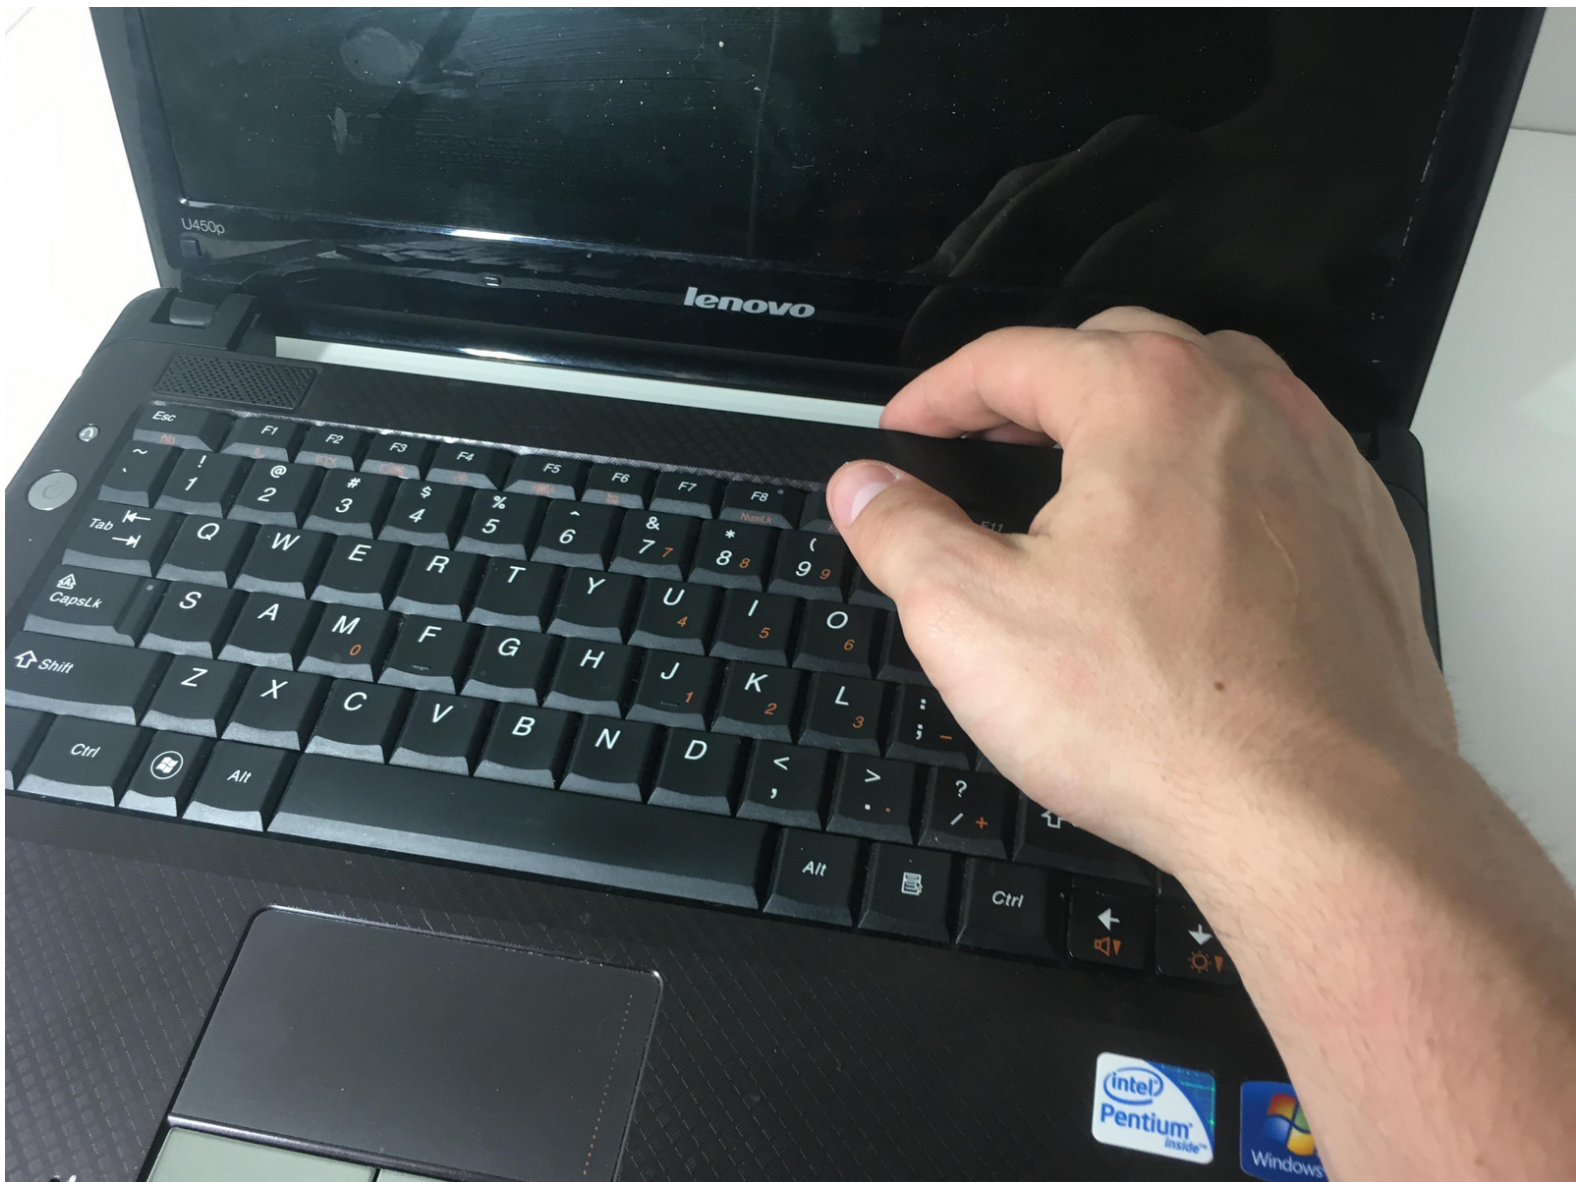

## INTRODUCTION

The keyboard is an essential part of your computer and this guide will take you through the steps to replace your damaged one.

---




### TOOLS:

- [Metal Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-


## Step 1 — Battery




 Turn off and unplug your laptop to prevent the risk of electrocution.

- Turn your laptop over so that the bottom is face up.

## Step 2

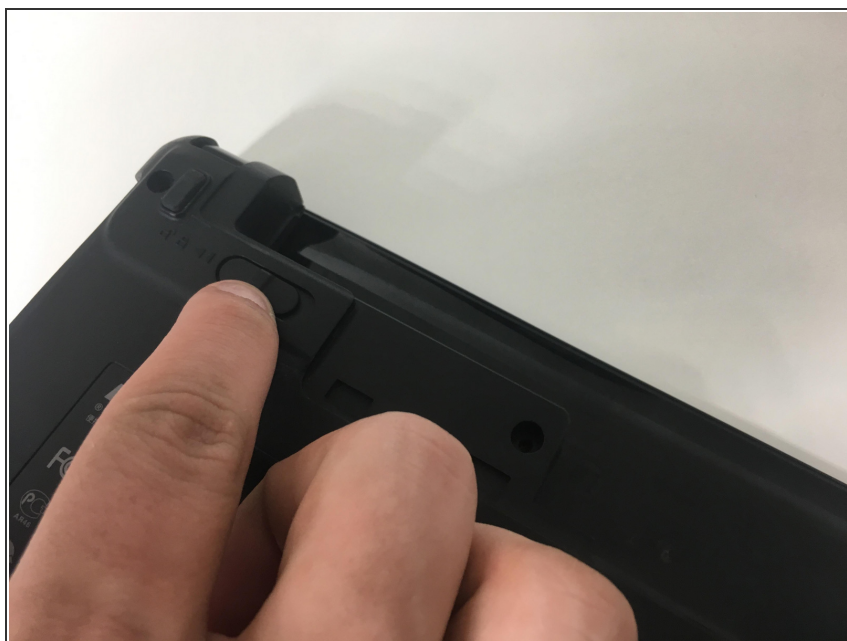

 On the top left of the laptop there is a switch. Make sure it's pushed in the unlocked position.

## Step 3



 
- Locate the switch collinear with the last one and move the switch to an unlocked position.

## Step 4



- Remove the unlocked battery.






- Open the laptop.

## Step 7



- Press the most northern region above F6 and F7 until a bit of your keyboard pops out.

## Step 8

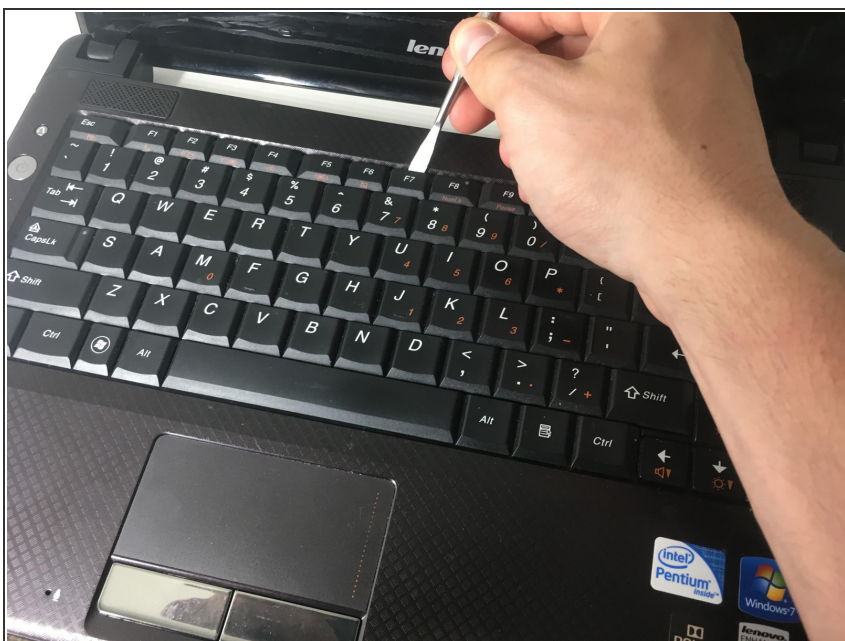


- Use the spudger to pry the top of the keyboard out.

## Step 9



- Disconnect the wire connecting to keyboard to the laptop.

## Step 10

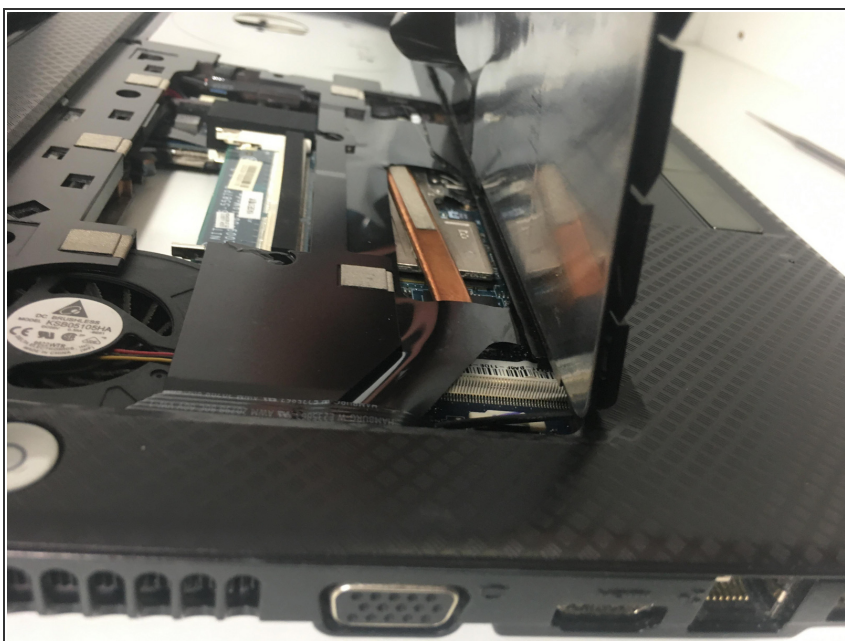

- Remove the keyboard

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 06:03:46 PM.